














1	DCS-2000		7	DCS/DCT-12000		13	DCP-6500	
2	DCT-3000		8	DCT-15000		14	DCP-8000	
3	DCS/DCT-4000		9	CP-25		15	DCP-10000	
4	DCS/DCT-6000		10	CP-40		16	XF-250	
5	DCS-7000		11	GF-150				
6	DCS-9000		12	DCP-5000				

Fig.4 Programming Switch Setting for Supported Pumps

AQLink A1

Quick Start Guide





Precaution – Controller Installation

- Please install the controller **away from wet and high humidity environment**, excessive humidity may damage the controller permanently
- Please install in an environment with **good ventilation**. This is to allow the internal electronics working at desired temperature and operating environment, or else product durability will be affected. Active ventilation is required when running pumps in high power continuously

Features

- Direct drive Jebao/Jecod T/S/P-series, CP series cross-flow pumps and compatible 3 phases pump/wave makers
- High performance fast response with sinusoidal current drive, offer minimized rotor vibration and extra quiet operation
- Pump Selection : Up to 32 preset pump parameters
- Control Input : On-board RJ45 socket, using one analog channel can control rotational speed, two analog channel can control clockwise and counter-clockwise direction
- Continuous firmware upgrade to support new pumps, please contact your sales for arrangement

Specification

- DC IN : 12 – 24VDC adapter or Pump Extender, current up to 4A
- CONTROL VOLTAGE: 0 – 10VDC, 2 channels via RJ45 8P connection
- PUMP OUTPUT : 24V 3 phases BLDC pump and wave maker
- Size and weight : Typical 10cm x 10cm x 2.7cm (W*L*H), 150g

Packing List

- AQLink A1 main unit
- Quick Start Guide (this document)

Quick Start

1. Setting of Programming Switch : On the side of the main unit there is a programming switch (Fig.1) with 5 slide levers, please refer to Fig.4, find your pump's model and set the slide levers accordingly. Please visit www.coral-box.com for latest support list




Fig.1 Programming Switch

2. Connection to Variable Speed Control Unit : Use a RJ45 cable to connect to the main unit's RJ45 8P socket. The pin definition of the RJ45 socket is as on Fig.2. They are 0 – 10VDC input, applying voltage out of this range will damage the unit permanently. CH1 1 – 10V corresponding to 10 – 100%, and CH2 having no connection or lesser than 2VDC , the pump will be in default/clockwise direction, else if voltage of more than 8VDC, the pump will rotate reversely

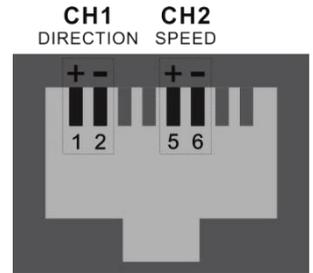


Fig.2 RJ45 Socket

3. Connection to Your Aquarium Pump : As on Fig.3, connect your pump to the AQLink A1 "PUMP" cable
4. Connection to Power Supply : Power off your original pump / wave maker DC adapter, and then connect to AQLink A1 DC jack input, the jack polarity is as below :



5. Finally, switch on the input power of the DC adapter, the green LED will light up indicating the unit start to operate normally



Fig.3 Pump and Power